

Engine Bay Fusebox Test.

Ignition Off.

| | <u>Fuse #</u> | <u>Amps</u> |
|--------|---------------|-------------|
| 0.00v | ----10---- | 30 |
| 0.00v | ----11---- | 40 |
| 12.77v | ----01---- | 20 |
| 12.77v | ----02---- | 15 |
| 12.77v | ----03---- | 10 |
| 12.77v | ----04---- | 20 |
| 12.77v | ----12---- | 30 |
| 0.00v | ----05---- | 15 |
| 0.00v | ----06---- | 10 |
| 0.00v | ----07---- | 10 |
| 12.77v | ----08---- | 25 |
| 0.00v | ----09---- | 10 |

Ignition On.

| | | |
|--------|------------|----|
| 0.00v | ----10---- | 30 |
| 1.81v | ----11---- | 40 |
| 12.44v | ----01---- | 20 |
| 12.44v | ----02---- | 15 |
| 12.44v | ----03---- | 10 |
| 12.44v | ----04---- | 20 |
| 12.44v | ----12---- | 30 |
| 12.44v | ----05---- | 15 |
| 12.44v | ----06---- | 10 |
| 12.44v | ----07---- | 10 |
| 12.44v | ----08---- | 25 |
| 12.44v | ----09---- | 10 |