

Emergency braking



In the event of a failure of the main service brake, a continuous pull on the control lever **A** will stop the vehicle. The dynamic stability control provides stability during emergency braking. If the emergency braking malfunctions, the message "Parking brake control faulty" will be displayed.




If a failure of the DSC system is signalled by the lighting of this warning lamp, then braking stability is not guaranteed.

In this event, stability must be assured by the driver by repeating alternate "pull-release" actions on the control lever **A**.

Emergency parking brake release

In the event of fault with the electric parking brake or a battery failure, an emergency mechanical control can be used to **manually release** the parking brake.

- ☞ Immobilise the vehicle (or chock it if the brake pedal has not been released), with the engine running, by engaging first gear (manual gearbox), position **P** (automatic gearbox) or **M** or **R** (electronic gear control gearbox).
- ☞ Switch off the engine, but leave the ignition on. If you are unable to immobilise the vehicle, do not operate this control and contact a PEUGEOT dealer or a qualified workshop as soon as possible.

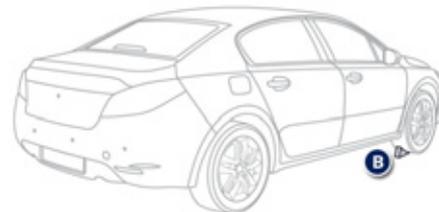

- ☞ if your vehicle has one, take out the vehicle chock **B**, located under the boot floor.
- ☞ On a slope, immobilise the vehicle by placing a chock in front or behind one of the front wheels, opposing the slope. On level ground, immobilise the vehicle by placing a chock in front or behind one of the front wheels.



The emergency braking must only be used in exceptional circumstances.



- ☞ Pass your fingers under the edge of the gaiter (below the gear lever surround).
- ☞ Unclip the surround by spreading the tongues (located below) then pull away the assembly of surround and gaiter.



- ☞ Turn the surround/gaiter assembly for access to the lever.
- ☞ Pull hard on the control **C** to release the parking brake. A loud knock confirms the release of the brake.
- ☞ Take care to refit the control in its housing.
- ☞ Replace the surround/gaiter assembly.

! With an emergency release, immobilisation of the vehicle is no longer be assured once the mechanical release has started and the mechanical control cannot be used to apply the parking brake again.

Do not carry out any action on lever **A**, or stop/start the engine while the release control is engaged.

Have it checked by a PEUGEOT dealer or a qualified workshop.

The control **C** cannot be used to apply the parking brake.

To re-engage the electric parking brake (after correction of the fault or battery failure), make a long pull on the control lever **A** until the parking brake warning lamp (!) flashes in the instrument panel, then make a second long pull until this warning lamp comes on fixed (not flashing).