


SIDE OPENING ELEMENT MECHANISMS

Front side door lock barrel: Removal - Refitting


51A

2 - Passenger side door

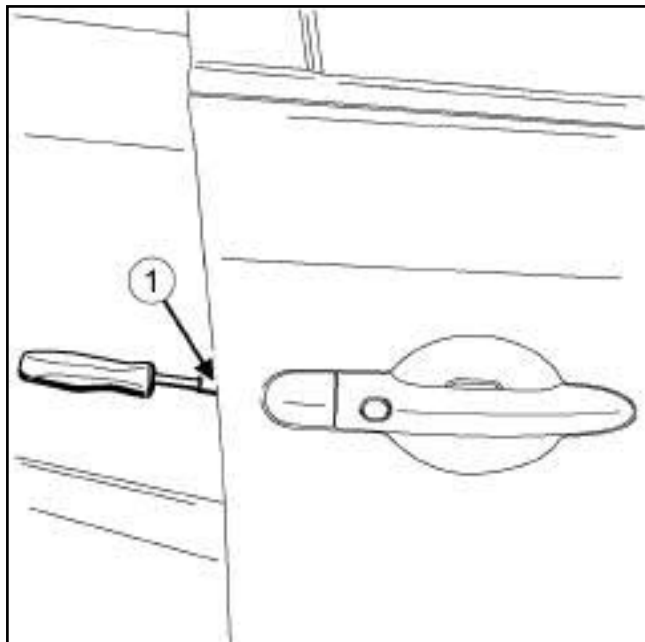

131872

- ☐ Undo the bolt (1) without removing it.

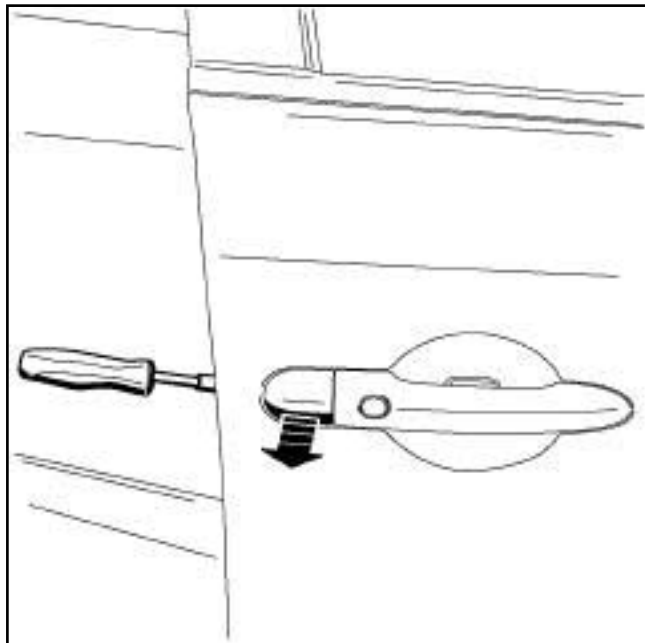

131873

- ☐ Remove the lock barrel.

REFITTING

I - REFITTING OPERATION FOR PART CONCERNED

1 - Driver's side door

- ☐ Refit the door lock barrel.

- ☐ Connect the locking rod on the lock.

- ☐ Refit the bolt (1) .

2 - Passenger side door

- ☐ Refit the door lock barrel.

- ☐ Refit the bolt (1) .

II - FINAL OPERATION.

1 - Driver's side door

- ☐ Refit:

- the lock blanking cover,
- the front side door control module (see **51A, Side opening element mechanisms, Front side door electric window mechanism: Removal - Refitting**, page 51A-10) ,
- the front side door sliding window (see **54A, Windows, Front side door sliding window: Removal - Refitting**, page 54A-4) (54A, Windows),
- the front side door trim (see **Front side door trim: Removal - Refitting**) (72A, Side opening element trim).

2 - Passenger side door

- ☐ Refit the lock blanking cover.