

REMOVAL

I - REMOVAL PREPARATION OPERATION



Note:

Before removing the exterior door handle, the mechanic must know which option applies to the vehicle.

1 - Front side door

a - (Vehicle option 1: With keyless entry)



- the front side door trim (see **Front side door trim: Removal - Refitting**) (72A, Side opening element trim),
- the front side door sliding window (see **54A, Windows, Front side door sliding window: Removal - Refitting**, page 54A-4) (54A, Windows),
- the front side door control module (see **51A, Side opening element mechanisms, Front side door electric window mechanism: Removal - Refitting**, page 51A-10) ,
- the lock blanking cover,
- the front side door lock barrel (see **51A, Side opening element mechanisms, Front side door lock barrel: Removal - Refitting**, page 51A-5) .

b - (Vehicle option 2: Without keyless entry)



- the lock blanking cover,
- the front side door lock barrel (see **51A, Side opening element mechanisms, Front side door lock barrel: Removal - Refitting**, page 51A-5) .

2 - Rear side door

a - (Vehicle option 1: With keyless entry)




- the lock blanking cover,
- the rear side door lock barrel,
- the rear side door trim (see **Rear side door trim: Removal - Refitting**) (72A, Side opening element trim).
- the rear side door sealing film, partially.

b - (Vehicle option 2: Without keyless entry)



- the lock blanking cover,
- the rear side door lock barrel.

II - OPERATION FOR REMOVAL OF PART CONCERNED

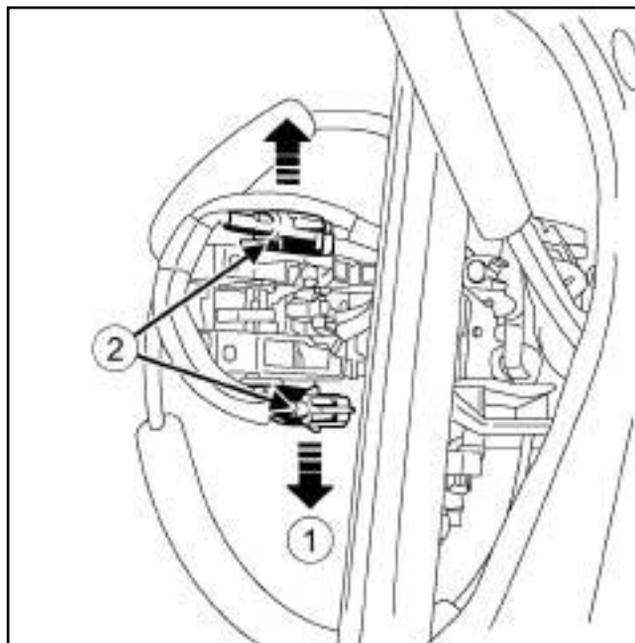

131874

- Remove the power supply connectors from the exterior handle module (depending on equipment level).
- Disconnect the supply connectors (2) (depending on equipment level).