

Tightening torques


front side door window bolts	6 N.m
------------------------------	-------

REMOVAL

I - REMOVAL PREPARATION OPERATION


- ☐ Remove the front side door trim (see **Front side door trim: Removal - Refitting**) (72A, Side opening elements trim).

II - OPERATION FOR REMOVAL OF PART CONCERNED

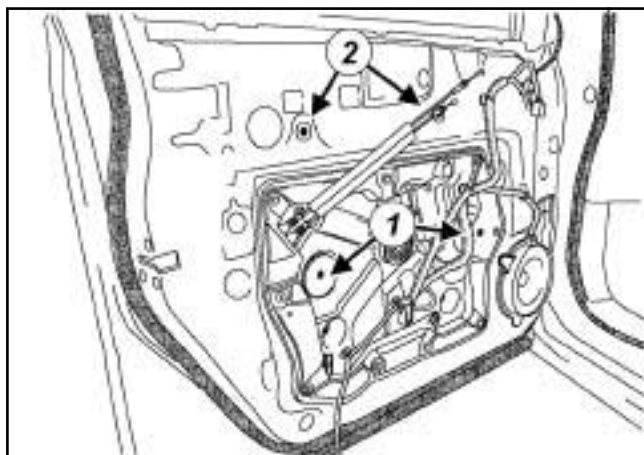


131880

- ☐ Position the window to gain access to the bolt (1) .
- ☐ Disconnect the battery (see **Battery: Removal - Refitting**) (80A, Battery).
- ☐ Remove:
 - the bolts (1) ,
 - the front side door window,
 - the bolts (2) .

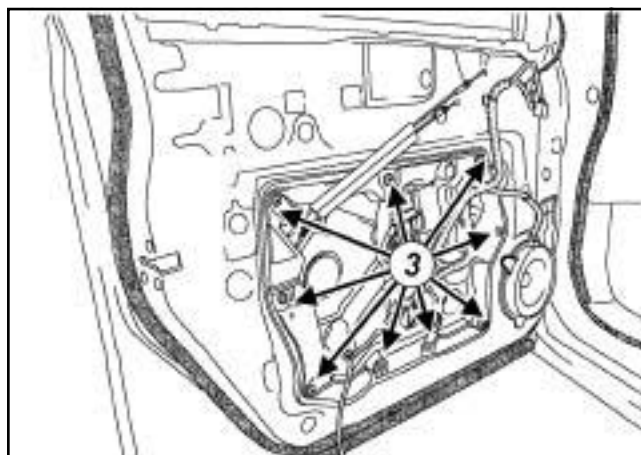

131881

- ☐ Remove the bolts (3) .
- ☐ Disconnect the electric window mechanism supply connector.
- ☐ Remove:
 - the clips,
 - the electric window mechanism, motor and operating mechanism assembly.

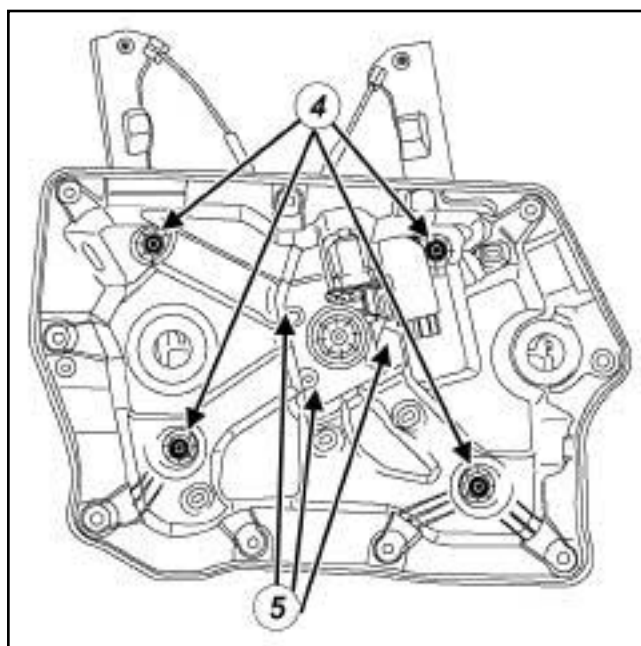

131882

- ☐ Remove:
 - the bolts (4) ,
 - the bolts (5) ,
 - the electric window motor.
 - the window winder mechanism.