

Tightening torques


front side door sliding window bolt	s6 N.m
-------------------------------------	--------

REMOVAL

I - REMOVAL PREPARATION OPERATION


- ❑ Remove the front side door trim (see **Front side door trim: Removal - Refitting**) (72A, Side opening elements trim).

II - OPERATION FOR REMOVAL OF PART CONCERNED

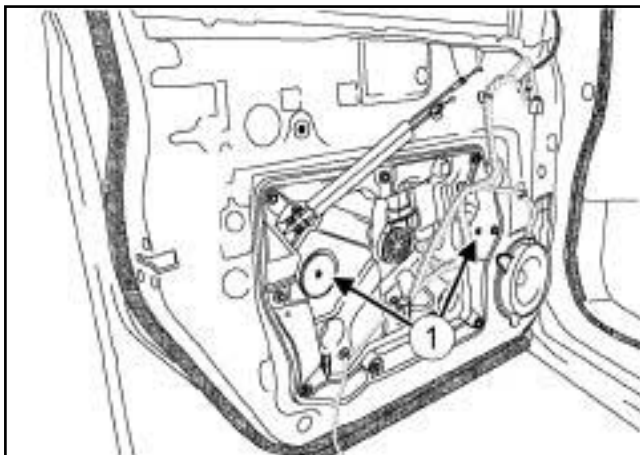

130229

- ❑ Remove the front side door seal cover.
- ❑ Lower the window to access the sliding window bolts (1) .
- ❑ Remove the bolts (1) .

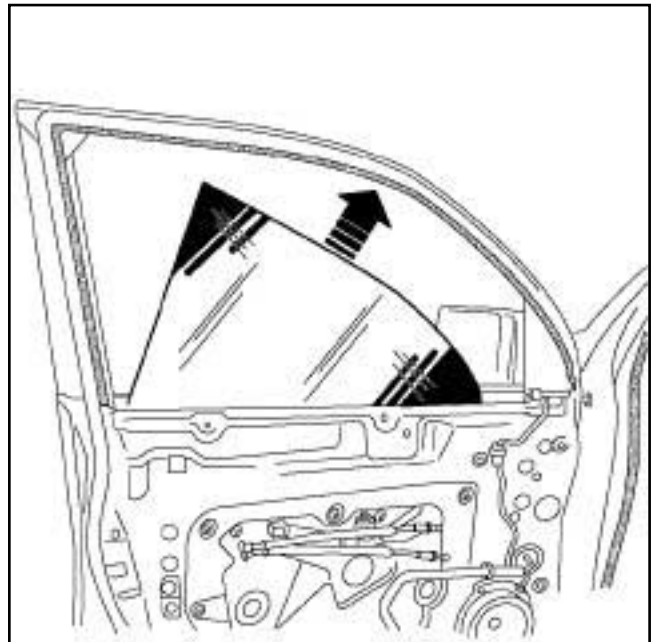

130230

- ❑ Remove the front side door sliding window.

REFITTING

I - REFITTING PREPARATION OPERATION

- ❑

Note:

When replacing the front side door sliding window, refit the window mountings.

- ❑ Clean using **HEPTANE** (see **Vehicle: Parts and consumables for the repair**) (04B, Consumables - Products).
- ❑ Wipe the bonding area of the window mountings using a **LINT-FREE CLOTH** (see **Vehicle: Parts and consumables for the repair**) (04B, Consumables - Products).